



broadcastvision entertainment

CAB – (Matrix 135X with MYE TV)

The following manual includes instructions for installing the Broadcastvision CAB for use on the MYE TV w/CABSAT connection.



Online Service Manuals available at: www.broadcastvision.com

Benefits of the Broadcastvision CAB include:

- Eliminates the hand-held battery operated remote control.
- Exercisers can control the cable/satellite box using controls on the front of the TV.
- An expensive head-end system is not required.
- Club operators can choose ANY cable, satellite or IPTV provider.
- TV channels are not restricted.
- Members can access all the channels available per your subscription.
- No troublesome wireless devices to manage.
- Proven Technology - BroadcastVision first offered a solution for set top box control in 2011 and is the clear-cut market leader in this technology.



broadcastvision entertainment

INSTALLATION

1. Before installing the CAB:


- Connect the set top box to the coax connection on the back of the screen.
- Run the TV through the Auto Program sequence to find the correct channel (usually channel 3 or 4) that will display the image from the cable box.
- Make sure to delete any other channels found during the channel scan so that only the channel that gives you picture from the cable box is saved.

Menu access for the Mye version of this screen:

MAIN MENU ACCESS (No IR remote is required to access the TV MENU)

To access the MENU for SET UP and TV ADJUSTMENTS press "0002"

To navigate through the MENU use Channel Up / Down and Volume Up / Down and CC / -

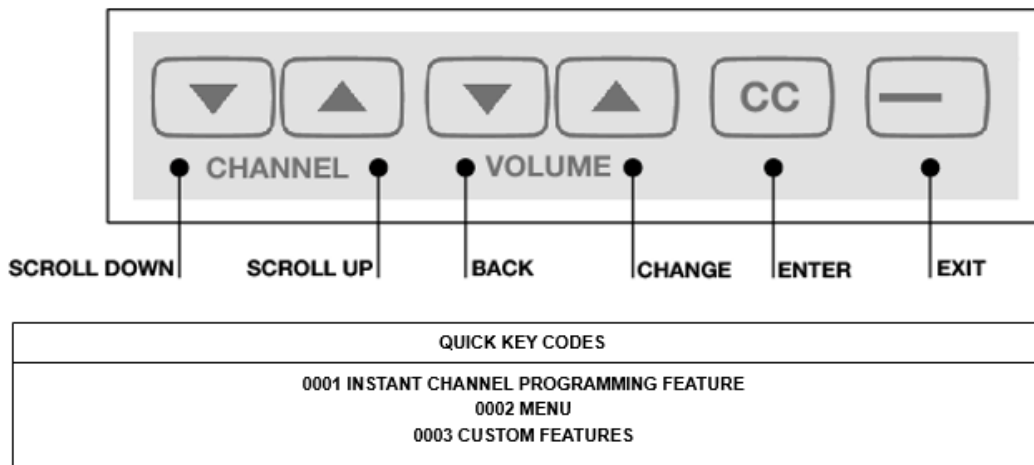

Menu access for the Precor version of this screen:

To view the Main Menu:

1. Press **Power On/Off** to turn on the PVS.
2. Press **CC + Volume Up + Channel Down**.
Note: If you do not press a button within 30 seconds (default), the PVS screen returns to the normal viewing mode.
3. Use **Volume Up/Down** to select a Main Menu category.
4. Use **Channel Up/Down** to navigate the sub menu.
5. Press **CC/Mute** to make a selection.
6. Press **Source** to return to previous menu.
7. Press **Dash (-)** to save setting and exit the menu.

BroadcastVision Entertainment Technical Support
Telephone: 1(888) 330-4283 ext.3 Email: support@broadcastvision.com



broadcastvision entertainment

2. Connect the RJ45 end of the CAB to the RJ45 connection to the right of the coax connection as seen in the picture below. You may need to remove a plastic cover to access this connection.



3. Remove the two screws on the back of the TV that hold the installation door in place. This provides a place to mount the CAB on the back of the TV using the adhesive Velcro already attached to the CAB.







broadcastvision entertainment

- 4. Once the CAB is hooked up you will need to run the IR emitter cable down the machine to the base of the cardio. There it will connect to either the set top box or a cat5/6 cable for sending the signal to an AV closet.

Tip: since the IR wire is very thin and easily damaged it is better to run the thicker IR extension wire through the machine.

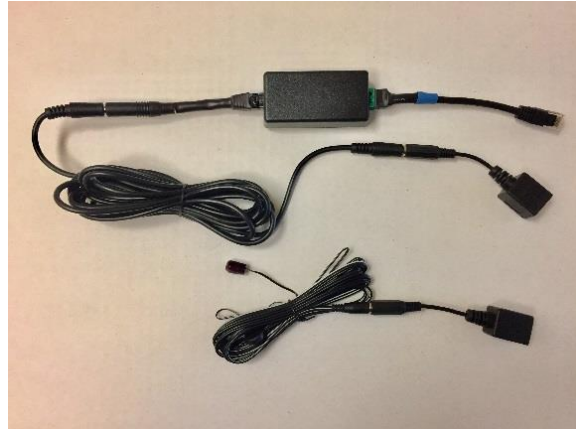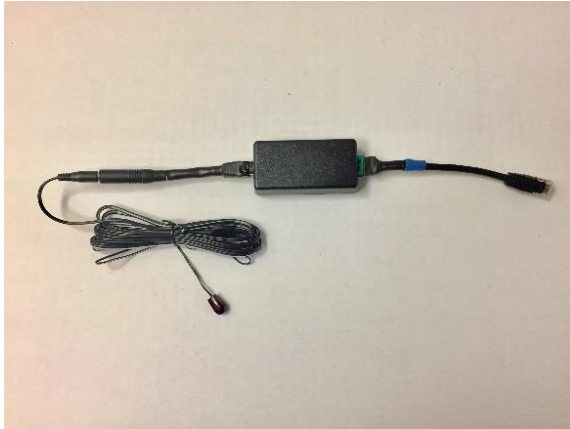

- 5. After the IR cable has been run through the machine the IR emitter should be placed over the infrared eye on the front of the set top box. If you cannot see where the IR eye is on the front of the STB, shining a flashlight at the front of the box will usually help you to see the IR eye. Please see the IR eye locations of some of the most common STB's below:





broadcastvision entertainment

6. If the set top boxes are located in another room, the supplied cat5 adapters will allow you to use a standard cat5/6 wire from each cardio machine to pass the IR signal back to the AV closet.



7. IR emitter shields are included with each CAB in order to help protect the emitter and keep it in place. Do not install the emitter shields until you are sure that the CAB is working properly.



Once installed if the CAB does not work for any reason check the Troubleshooting Guide below or if necessary call technical support at 1(888)330- 4283 ext.3 before leaving the facility



broadcastvision entertainment

Troubleshooting Guide:

1. **Double button presses** – Some set top boxes respond to more than one of the IR codes that we send out. If you notice that pressing a channel button on the console results in multiple presses, simply remove the 2 screws that hold the lid on the CAB and turn on dip switch 2 and 4. If this does not solve the problem, call (888)330-4283 ext.3 for further assistance.

2. **No control over set top box**

a. **Check if CAB is getting power and channel commands from the console** – CAB contains internal LED power lights. Two indicator LEDs are located on either side of the console-side connector inside the enclosure.

· **GREEN** - Power LED, on whenever the CAB is powered

· **RED** - Activity LED, flashes whenever the CAB receives and processes commands

The location of the LEDs is such that they should be visible through the enclosure around the CAB connector to the console.

b. **Incorrect IR emitter placement** – If the IR emitter is not in the correct location on the front of the box you may need to move it around until you find the location that works.

Tip: Try initially holding the IR emitter away from the front of the STB initially then continue pressing the channel button while “zeroing in” on the correct IR emitter placement.

c. **Set top box is in RF mode – change to IR mode** – Many set top boxes can operate with a hand-held remote in RF or IR mode. For the CAB to function, it is critical that the STB accepts IR channel commands. To test if the STB is in RF mode, place your hand over the hand-held remote control IR transmitter and see if the STB receives channel change commands. If the answer is yes, the STB is in RF mode. Check online for instructions to change the STB remote control mode from RF to IR.

d. **IR signal strength issue** – In rare circumstances, the CAB may output too strong of an IR signal for the set top box IR receiver. To test if the IR emitter is over-driving the set top box receiver, pull the emitter away from the front of the set top box, and press the channel button to see if the set top box now receives the channel command. Opening up the CAB and turning on dip switch #8 will reduce the IR current by 50% and solve this issue.




broadcastvision entertainment

- e. **No Continuity between CAB and IR emitter** – In some circumstances utilizing the “Far” set top box scenario, the CAT5/6 cable between the set top box and the CAB may not provide full continuity through wall plates etc. It may be helpful to re-locate the STB at the base of the cardio and re-test. Or, it may be helpful to temporarily run an alternate CAT5/6 cable from the CAB to the set top box then re-test.

- f. **CAB not programed for the correct set top box** - Your CAB is defaulted for Broadcastvision’s popular “Unicode” setting which provides control of the most popular cable and IPTV set top boxes including, but not limited to:
 - AT&T Uverse, Brighthouse, Comcast, Time Warner, and Verizon

The CAB can be quickly configured on site to operate other popular set top boxes by flipping dip switches inside the CAB enclosure as pictured below. CAB operates with many other set top boxes not included in the list below. Please call BroadcastVision support at 8883304283 x3 to determine the dip switch settings for your cable, satellite, or IPTV provider.

- 1 2 3 4 5 = Dip Switch settings for the following set top boxes:
- 0 0 0 1 1 - CAB will output commands for Amino set top boxes
 - 1 1 1 0 1 - CAB will output commands for Enseo set top boxes
 - 0 0 1 0 1 - CAB will output commands for LG set top boxes
 - 0 1 0 0 1 - CAB will output commands for Rogers set top boxes
 - 1 0 0 0 1 - CAB will output commands for Cox set top boxes
 - 0 1 0 1 0 - CAB will output commands for Charter set top boxes
 - 1 0 0 1 0 - CAB will output commands for Unicode-Satellite for DirecTV and Dish set top boxes

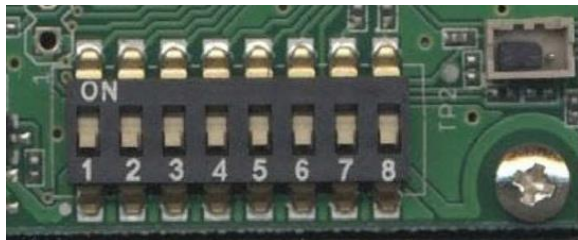



broadcastvision entertainment

Broadcastvision Entertainment Terms and Conditions

BVE Stock Items Returned for Credit

BVE manufactured products may only be returned for credit with written authorization from BVE within 30 days of the original invoice date. A 25% restocking fee will be charged for all returns. All products being returned to BVE require a Return Authorization number. Products must be returned in original condition with the original packaging, components and support material. Credit is contingent upon inspection of returned items.

Return Authorizations

A Return Authorization number must be issued from BVE prior to any item being returned for credit, repair or exchange. Items returned without approval will be refused and returned to the sender. Requests for a Return Authorization number may be made to our Customer Service Department at 1-888-330-4283.

Repairs and Replacements

A warranty repair of BVE manufactured product includes parts, labor and the return GROUND shipping to the customer. Repairs made while under warranty are covered for the duration of the valid warranty period. Non-Warranty repairs receive a "Repair Warranty" of 90 days parts and labor only. Warranties do not include on-site service. Advance Replacements of items in question may be arranged if the product is within 30 days of invoice date and is subject to product availability. Advance Replacements must be secured by the customer with a valid Credit Card or Net30 terms of an account in good standing.

Shipping

Shipping dates are estimates only. Products will be shipped per the designated Shipping Method. Paying for an accelerated Shipping Method only indicates the product will ship by that method when the product or repair is available. BVE will not be held responsible to accelerate shipping, discount invoices or compensate customers for loss of profits, business or goodwill due to back orders, shortages, shipping complications, damages, product malfunction, labor, construction, nature or delays.

Warranties

All products sold by BVE carry the original manufacturers' warranty. Warranty begins on the invoice date of purchase from BVE or an authorized BVE Dealer / Distributor. Warranty may alternately begin on the date of installation with a valid Installation Completion Form from an authorized BVE Dealer, Distributor or Installer. Warranties do not cover damage due to abuse, misuse, modification or the result of any third party. Warranties are not transferable and cover only the original purchaser with a valid invoice. Manufacturers will, at their option repair or replace equipment, as they deem necessary. Warranties do not include "on-site" service.